HOW TO INSTALL THIS TUBULAR LEVER LOCK

1 MARK DOOR & BORE HOLES

- Fold template over edge of door, mark site 60mm(2 3/8") or 70mm(2 3/4") of holes.
- Bore ø54mm(2 1/8") and ø25mm(1") holes through door.
- ∴ Cut out a 58×26×3mm (2 9/32"×1"×1/8") base.

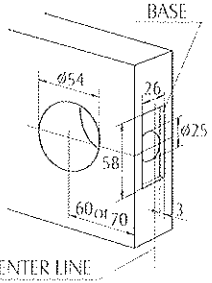

2 INSTALL LATCH

- Adjustable latch for 60mm(2 3/8") or 70mm(2 3/4") backset.

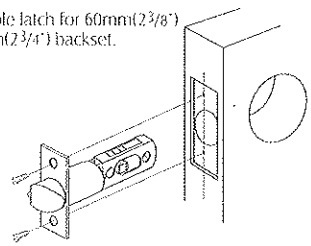

3 INSTALL LEVER

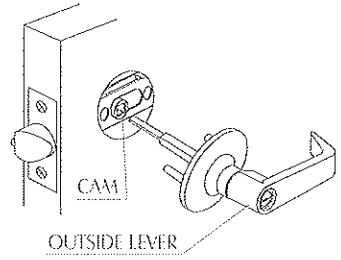

4 INSTALL INSIDE LEVER

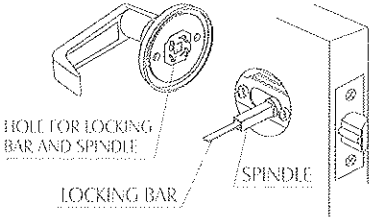

5 INSTALL STRIKE

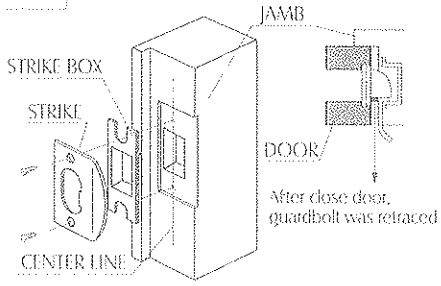

INSTRUCTION FOR ADJUSTABLE LATCH



The cam is pushed fully to the right for 70mm(2 3/4") backset.
(During the adjustment, keeping two teeth of the cam to forward always.)